

FREEMAN

Let the  
MUSIC  
play



karaoke<sup>1001</sup>

 FREEMAN

Let the  
MUSIC  
play



Putere  
RMS  
25W



karaoke<sup>1001</sup>

**USB  
FM  
AUX**  
Microfon



karaoke<sup>1001</sup>



**FREEMAN**

**Let the  
MUSIC  
play**



karaoke<sup>1001</sup>

**Putere RMS** 25 W  
**Putere maximă** 80 W  
**Diametru difuzor** 12"  
**Tweeter** 1.5"  
**Sensibilitate** 80-120 dB  
USB  
Slot Card  
Telecomandă  
Microfon  
Bluetooth  
Radio FM  
Intrare AUX

FREEMAN

Let the  
**MUSIC**  
play